
MDCWALL Installation Guide

Thanks for choosing our MDCWALL remote control. We strongly recommend that you read this manual carefully before installation.

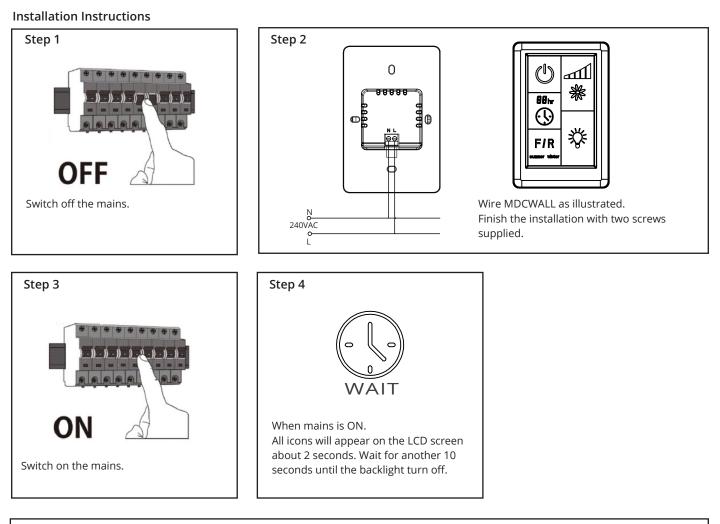



Step 5


Turn on ceiling fan power for pairing receiver, touch and press 0 about 5 seconds, the receiver will make a beep sound. This indicates the receiver has picked up the frequency that was selected on the transmitter. NB: After the mains is on, do not press any other button on the transmitter before pressing 0 button as this will cancel the process.

After completing the step above, you should be able to operate the ceiling fan and light from the wall controller. If the fan is not responding, please turn the power off to the receiver and repeat the above step again.



WARNING Installation MUST carry out by a qualified and licensed electrician.

Functions of Transmitter

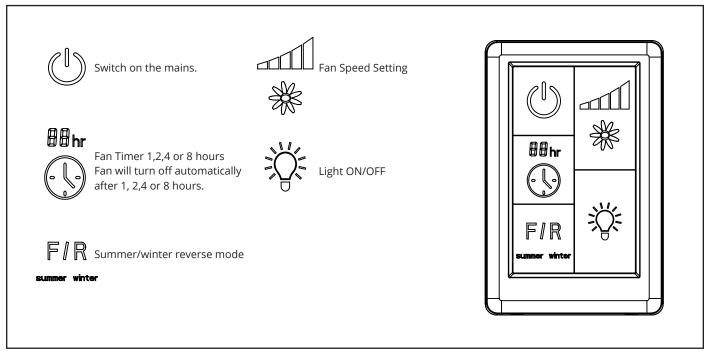

1 Year In-Home Warranty

Visit our website for details https://www.martecaustralia.com.au/warranty-statement/

CARE INSTRUCTIONS

- Ensure the ceiling fan is disconnected before any cleaning or maintenance work is carry out.
- LED lights are not detachable nor replaceable. It can only be supplied with the ceiling fan as one unit.

WARNING

- Installation of product MUST follow SAA standards and meet local authority regulations.
- Installation **MUST** be carried out by a qualified and licensed electrician.
- Fan and light **MUST** be earthed.
- Bracket MUST be firmly attached to a flat solid structure or timber frame.
- DO NOT mix blades from one model to another, all blades MUST be replaced if damaged.
- The warranty is VOID if product is not installed according to this installation guide.



